



Marble Top

Installation Instructions

See separate instructions for Vanity Installation

TOOLS AND SUPPLIES NEEDED

- ◆ Plumber's putty
- ◆ Sealing compound
- ◆ Level
- ◆ Supplies and tools needed for installing faucet and drain
- ◆ Tape measure

PREPARATION

Remove marble top from carton. Remove old lavatory or cabinet top. Check all old pipe fittings or get new ones before beginning the job.

FIRST

Determine Faucet and Drain Needs

Set marble top on vanity base. Measure all water pipes, P-traps, and drain and make sure you have all needed supplies.

Note: A cultured marble top is a molded product which can be sanded, ground down, or cut as required to fit close to walls. A circular saw, using a carbide 40 plus tooth blade, may be used to cut a top to length. Place masking tape on the front side over the position of the cut then (moving slowly) cut from the back side with the circular saw. To dress edge after cut, sand with electric sander or sand paper with a block using 100 grit or finer emery cloth quality sand paper. Holes may be drilled with a hole saw (standard 1 1/2") or a metal cutting drill bit. Please note that it will **Scratch Quite Easily** and masking tape should be used to protect it during these operations.

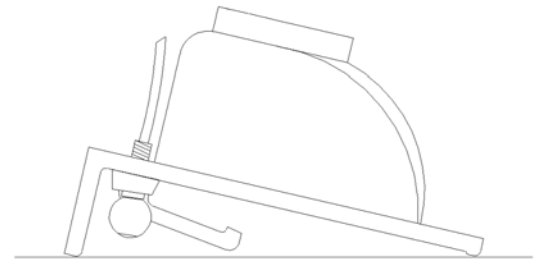


Figure 1

SECOND

Install Faucet on Marble Top Before Installing Marble Top on Vanity

Remove marble top from vanity and place it carefully upside down on carpeting or blanket (see Figure 1).

Note: Faucet can be installed after marble top and vanity are in place but it's easier as described below.

Pull vanity and marble top out from wall so that the faucet holes are accessible from the back.

Mount faucet into the proper holes and tighten by hand.

Warning: Tighten only by hand or until faucet cannot move.

Tightening with wrenches **Too Tight Could Crack and Ruin The Top!**

Attach water supply lines to faucet (see Figure 1).

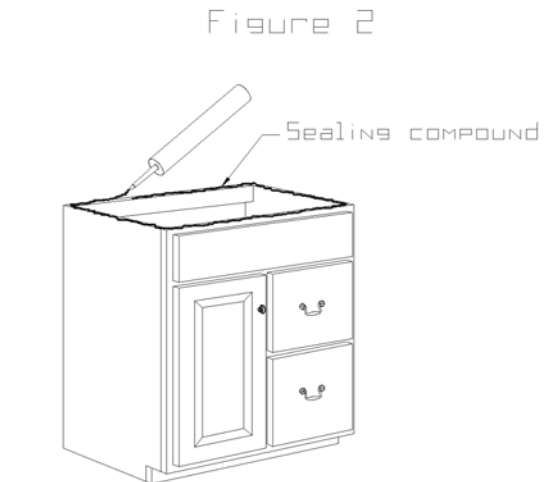


Figure 2

THIRD

Seal Marble Top to Vanity

Apply a bead of sealing compound on all four edges of vanity (See Figure 2). Set marble top in place on the vanity making sure it is snug against the wall.

Connect drain lines using plumber's putty to seal the top drain flange. Attach water supply lines to main water lines.

FOURTH (Optional)

Apply bead of sealing compound at the joint of wall and back splash.

Many people apply a smooth bead of sealing compound at the joint of wall and back splash (see Figure 3). It is important that the color of the sealing compound match the color of the wall or the marble top or both.

Attach supply lines to main water lines.

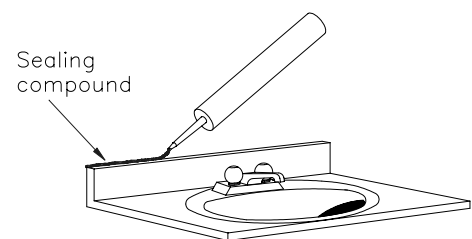


Figure 3