




Linen Front Installation Instructions

TOOLS AND SUPPLIES NEEDED

- ◆ Hammer
- ◆ Level
- ◆ Tape Measure
- ◆ #8 Finish Nails or #8 Screws
- ◆ Square
- ◆ Six wood cleats (3/4" x 3/4" x 4")

Figure 1
Wall Opening Installation

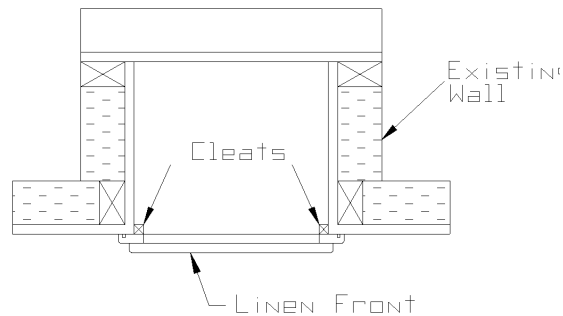

FIRST

Install Linen Front

Position the linen front, level and square in the desired location. Attach face to structure with nails and/or screws. The best installation method depends on your structure but two possible ways are as follows:

1. Attach 3 cleats to each side of linen front, then attach cleats to the wall (see Figure 1).
2. Same as #1 above except use 2" to 3" metal corner brackets that can be purchased at most building supply stores.

SECOND

Install Shelves (not provided)

If possible put a fixed shelf level with the upper edge of the linen front face frame bottom and middle rails. Any additional shelves desired should be added to complete the shelving project.

THIRD

Install Cabinet Door hardware using the hardware and screws provided if not already factory installed.