



# Assemble & Install a 3-Piece Dresser Vanity

Installation Instructions



See Manufacturer's instructions for Tops and Drop-In Bowls.

## Tools and Supplies

- Phillips (cross-tip) Screwdriver
- Keyhole Saw or Saber Saw

## 3-Piece Dresser Vanity

1. Set the pieces beside each other as they will be assembled on a level surface.
2. Remove Drawers.  
Premier Drawers:
  - Squeeze handles underneath the Drawer.
  - Pull Drawer straight out, then up.

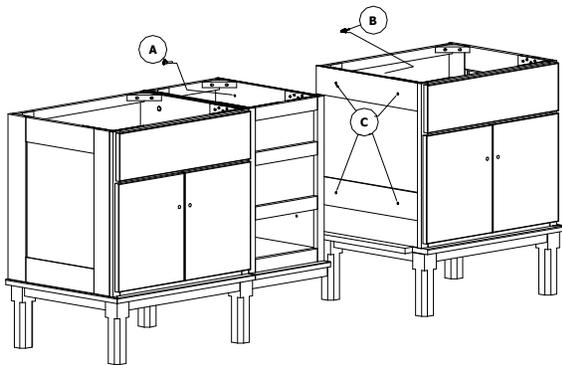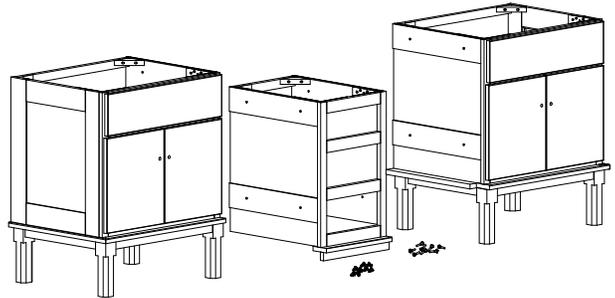

3. Place the two outside sections close enough together so the center will set on both sills.
4. Align the four predrilled holes (C) for each section.
5. Insert the binding barrel (A) into predrilled hole, from the opposite side insert the binding barrel screw (B) and screw together loosely.

6. Once all eight couplings are loosely attached, make sure the front and top of the face frames are flush and level.
7. Use a Phillips screwdriver and tighten the couplings securely.
8. Dresser assembly is now ready to be slid into place and have plumbing installed. Cut plumbing holes into the back or base, as needed.
  - Use a Keyhole Saw or Saber Saw.

