



Premier Vanity Skirt Installation Instructions

TOOLS AND SUPPLIES NEEDED

- ◆ Drill
- ◆ Hammer
- ◆ 1 1/8 finishing nails
- ◆ Toe Board Support Blocks (provided)
- ◆ 4—1 1/4 Wood Screws
- ◆ Small C Clamp

GENERAL CONCEPT

The Premium vanity skirt is attached to the bottom front of the vanity and cannot be removed after the vanity has been installed. It does not change the height of the vanity.

FIRST

Remove drawers and lay vanity on its back. Carefully remove the toe board and old skirt without damaging the vanity by tapping on the back side with a hammer. For best results, also remove the small support blocks on the ends of the toe board.

SECOND

Attach support blocks that were supplied, to both sides of the cabinet, making sure the nails go through thickest edge of the block and into the cabinet side. These blocks should be attached as shown to the vanity side 3 1/4" from the inside edge of the face frame. See Photo 1

Nail third support block to the underside of the face frame in the center. See Photo 2

NOTE: Using longer than 1 1/8 finishing nails may result in the nail going through the other side.

THIRD

Center the skirt on the front of the cabinet with the ends as even as possible with the edges of the frame. See Photo 3

Either have someone firmly hold down the skirt or use a clamp to keep the skirt in place when attaching it.

Screw two screws into the bottom of the frame to attach the skirt. See Photo 4.

Do the same on the other end of the cabinet.

Front of cabinet

Photo 1

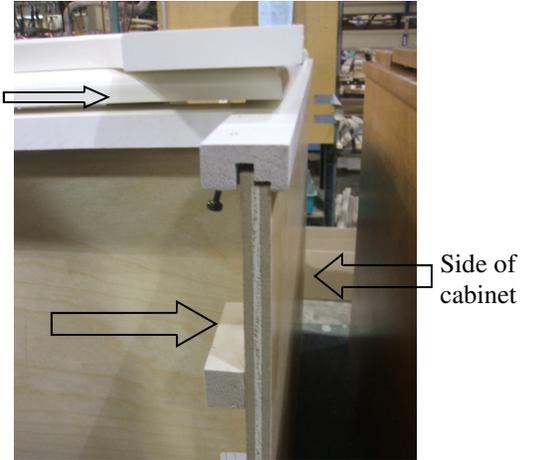


Photo 2



Photo 3



Photo 4





Premium Vanity Skirt Installation Instructions

FOURTH

Nail the support block that was attached in the center of the frame to the skirt to anchor down the skirt in the center.

FIFTH

Reattach the toe board that was removed in Step 1 to the support blocks that were added in Step 2 by nailing from the backside. See Photo 5.

Photo 5

