



MITERED FRAME MIRROR DOOR HINGE ADJUSTMENT

These instructions are intended to be used only after standard door adjustments have been made and one of the rubber bumpers on your door is still not touching the frame of the cabinet.

Solution: You will need to spring one or more hinges.


Tools needed: A pair of slip joint pliers and a putty knife.

Step by step instructions:

1. Open the cabinet door and count the number of rubber door bumpers on the back edge of the door.
 - If there are more than two remove all but the top and bottom bumper using the putty knife as shown in the picture.



2. Close the cabinet door and from the side view look at the top and bottom rubber door bumper and make note of which one is **not** touching the frame of the cabinet.

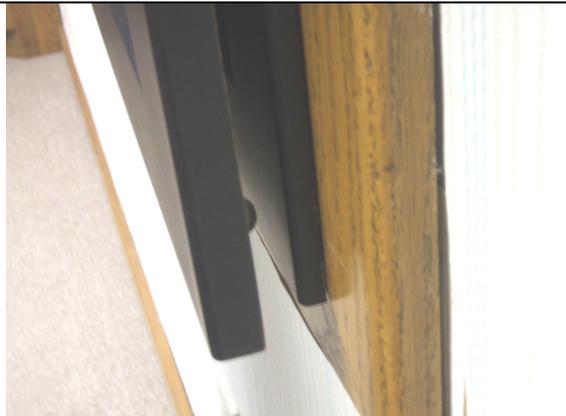

3. Place the nose of your pliers into the hinge cup of the middle hinge and allow the flat side of the pliers to rest on the screw of the hinge plate that is attached to the frame of the cabinet as shown in the picture.



4. Slowly close door allowing the nose of the pliers to be closed up in the hinge until you hear a slight pop or creaking noise as shown in picture
- **Do not close too far, stop immediately when you hear the pop or creaking noise.**



5. Repeat steps 3 and 4 for the hinge closest to the rubber door bumper that was **not** touching the frame in step 2.

6. Close the cabinet door and check the door closure to see if both rubber door bumpers are now touching the frame of the cabinet.
- If both rubber door bumpers are not touching the frame of the cabinet repeat steps 3 through 5 closing the door slightly further until desired closure is achieved.