



Linen Cabinet and Linen Storage Crown Molding Attachment Instructions

TOOLS AND SUPPLIES NEEDED

- ◆ Phillips Screwdriver
- ◆ #8 x 1 $\frac{3}{4}$ " Phillips head Wood Screws

FIRST

Place crown molding on top of Linen Cabinet or Linen Storage unit (see Figure 1).

Place the back edge of the crown molding flush with the linen closet while centering the assembly over the face of the linen cabinet.

SECOND

Using the 1 $\frac{3}{4}$ inch screws fasten the crown molding to the linen cabinet (see Figure 2).

THIRD

Install the cabinet according to Installation Instructions.

***NOTE**

Linen towers will have screws on the inside that will need to be screwed upward into the crown.
(see Figure 1)

Figure 1

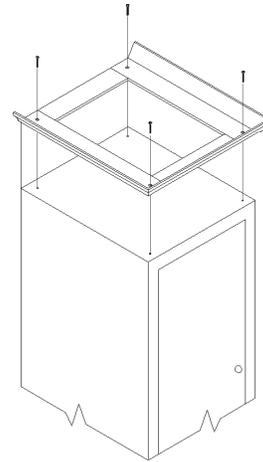


Figure 2

