



## Sconce Installation Instructions

NOTE: Modifications to your existing wall may be necessary to accommodate the required position of the electrical box.

Electrical box **MUST** be mounted to stud or cross brace and recessed 1/4" from face of sheetrock.


**Failure to mount this on a stud will not allow pins to secure correctly and may cause injury or damage, or both.**




Draw a 4 1/4" x 4 1/4" square box and center it on the electrical box.



Using a razor knife, remove all the paper inside the 4 1/4" x 4 1/4" square. You will also need to remove about 1/8" of sheetrock so that the plate on the back of the sconce is recessed. This will allow the sconce to lay flat against the wall.

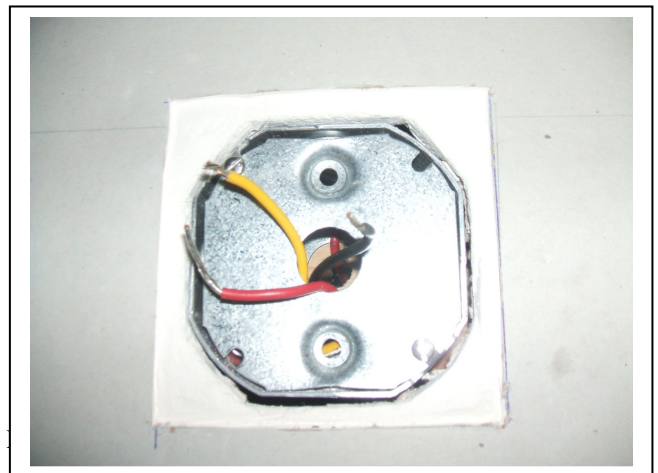

Run the electrical wire through the hole in the electrical box insert cover and secure connections with provided wire nuts.

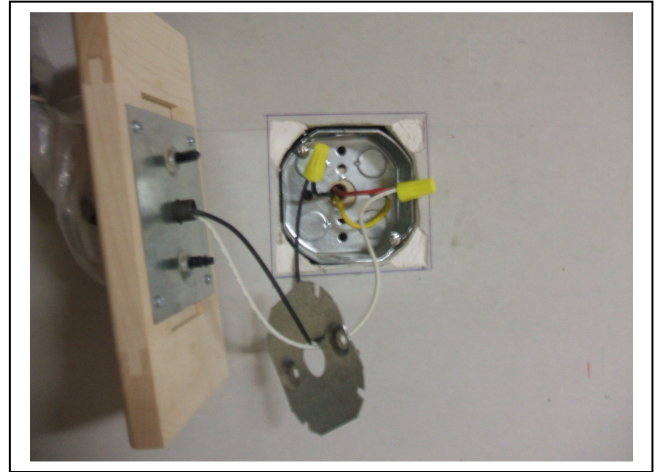

Attach insert cover to electrical box.

Align push pins with holes and press firmly into place. A slight twist may be needed to align pins correctly.

