



Remove & Re-Install a Vanity Sill

Tools and Supplies Needed:


- 1 1/4" Square pan head screws (included)
- Power drill
- Square bit (included)
- Tape Measure

Safety First

- Secure sill firmly to prevent injury.
- Keep hands at a safe distance from drill when working.
- Wear safety glasses at all times while replacing parts.

Removal Procedures

1. Turn cabinet upside down, carefully, so that the legs are upwards.
 - This must be done carefully in order to prevent any damage to the cabinet.

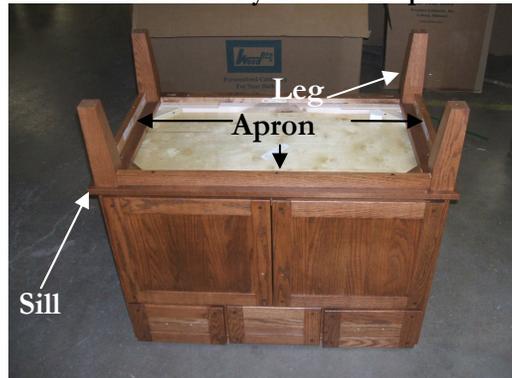

Removal Procedures cont...

2. Remove all square head screws holding the sill to the cabinet.
 - Screws are located on bottom of sill just inside of apron.



3. Lift up on sill, firmly, on all sides until all nails have come out.
Note; nails are for aligning purpose only they are not necessary.
 - If any nails remain in the cabinet:
 - Clip off with a pair of side cutters
 - Hammer the remainder of any nails flat.



Attachment Procedures

4. Lay replacement sill onto the bottom of the cabinet.
 - Legs should be facing up.




Attachment Procedures cont.....

5. Center sill onto bottom of cabinet using a tape measure.
 - Overhang should measure 1/2" on both sides of cabinet.
6. Place straight edge against the back edge of the vanity side and sill to ensure that they are flush.
 - Once sill is in place, it is critical to hold sill in place for next step.



7. Attach the sill to the back edge of the vanity.
 - Insert 1 1/4" screw through the back rail of the sill, through the attachment block and into the back frame of the cabinet.
 - **Do not move the sill when securing.**

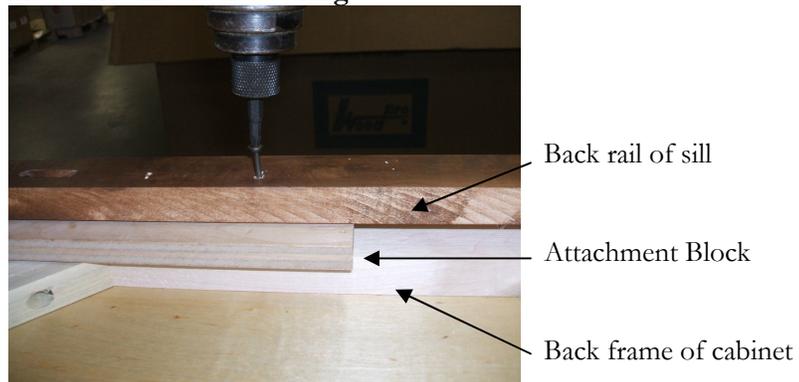

8. Repeat steps 6 & 7 to attach other side of vanity sill back.
Note: there should now be 2 screws in the back rail of the sill.

Attachment Procedures cont.....

9. Mark front edge of the vanity sill behind the apron for placement of 1 1/4" screws.
 - This is done using a tape measure and a pen.
 - **All marks should be:**
 - 1/4" from back side of apron (shown below).
 - 4" from the leg on each end
 - All other marks should be no more than 12" apart.

Note: there should be a minimum of 3 screws in the front rail of the sill.



10. Insert screw through the sill into the cabinet frame at each mark made in Step 9.
 11. Make a mark on the sill above each support blocks on both sides of the vanity.
 - Make each mark 1/4" from the inside of the apron.
- Note: there should be 2 screws in both side rails of the sill.**
12. Insert screw through the sill and into the support block at each mark made in Step 11.



13. Turn cabinet upright.
- This must be done carefully in order to prevent any damage to the cabinet.

