

Upper Wall Cabinets

Installation Instructions

TOOLS AND SUPPLIES NEEDED

- **♦** Hammer
- **♦**Level
- ♦ Phillips Screwdriver
- ◆ Tape Measure/Yardstick
- ◆ Powered Drill and 3/32" and 3/16" Drill Bits
- ♦ A few #4 or #6 Finish Nails
- ♦ Assistance by a second person may be needed

PREPARATION

Remove cabinet from carton and remove bag of hardware from cabinet if not already factory installed.

Figure 1

FIRST

Determine Cabinet Location

Determine height location by considering alignment of this cabinet's top or bottom with the top or bottom of other cabinets near it and by holding cabinet up to wall to determine height needed for individuals that will be using the cabinet.

Using a level, attach a temporary cleat using finish nails. (These nail holes may require patching after removal.) Mark on wall the left and right edges of cabinet. Attaching the temporary cleat may not be necessary if you have a second person to hold cabinet in place.

SECOND

Locate and Drill Holes

Note: Cabinet should be attached to at least one (1) stud.

Locate at least one wall stud and transfer placement to mounting strip, evenly locate a second mounting hole on mounting strip or have your assistant hold cabinet in place. Pre-drill stud mount holes in mounting bracket and through cabinet back using 3/32" drill bit.

Place cabinet in position above the temporary wall cleat and drill 3/32" pilot holes in mounting bracket.

Remove cabinet and drill a 3/16" hole in wall for those general (Non-stud) screw locations that are to be attached using plastic anchors. Insert plastic anchors.

THIRD

Mount to Wall with Screws (Provided)

Place cabinet in position above the temporary wall cleat and screw in the #8 screws provided using a Phillips screwdriver (see Figure 2). If the wall is uneven such that the cabinet does not lie flat against the wall, shims (cedar shingles or other thin wood) may be required between the wall and cabinet at the screw locations so that the doors will look aligned and work properly. Remove temporary wall cleat if one was used.

Notes:

- Masonry walls require lead anchors to be set.
- To drill ceramic tile, first score the tile surface gently with a hammer and center punch or nail. Use a tungsten -carbide masonry drill only. To avoid breaking the tile, do not force the drill—allow it to cut through.

FOURTH

RABMTT 11/15

Adjust Adjustable Shelves and Install Door Knobs/Pulls

Choose location of adjustable shelves and insert a plastic support into each hole at all four corners of shelf. Insert shelf into the 4 shelf clips.

Install cabinet door knobs/pull(s) using the screws provided if not already factory installed.

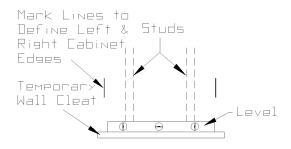


Figure 2

